


Instructions for installation of drivers for SITOP DC-UPS Module (6A / 15A) with USB interface under Windows XP®


Before starting the installation please make sure that the SITOP DC-UPS software (freeware download under www.siemens.de/sitop) is completely installed. Then connect the SITOP DC-UPS Module with a free USB interface. The SITOP DC-UPS Module is now identified automatically, the hardware wizard opens:

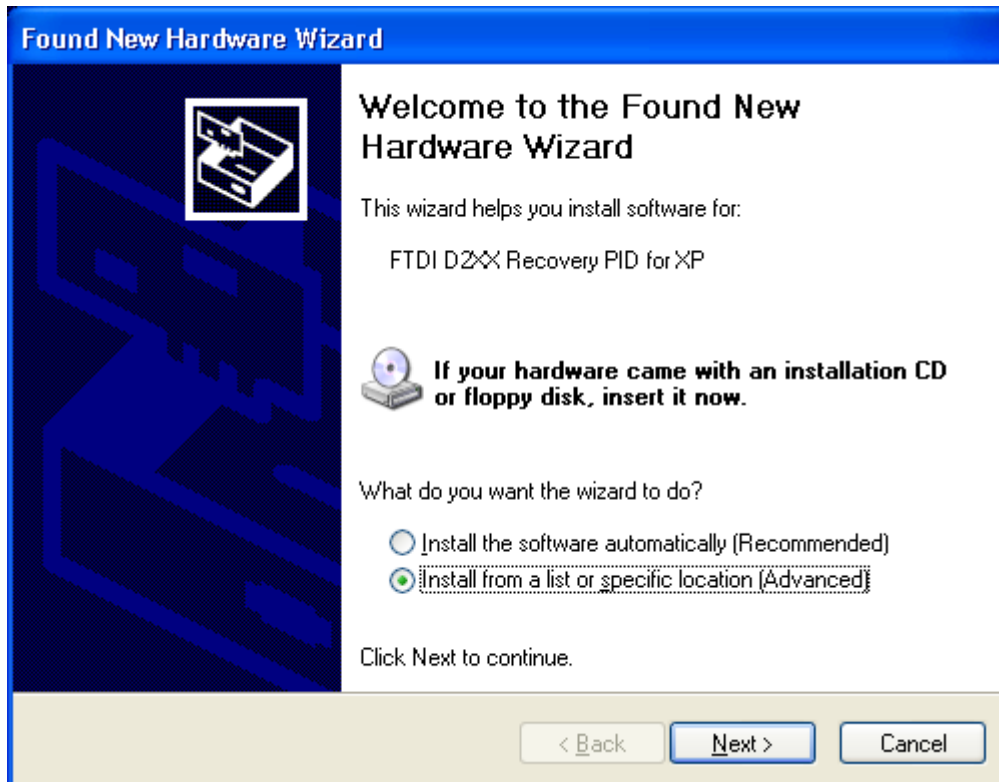


Choose „Install from a list or specific location“.
Click „Next“ to continue.

In the next window you choose the location from which the driver will be installed, normally: „C:\Programme\Sitop\DRIVER“

If you have installed the SITOP DC-UPS software in another location, please enter it in the browse field. Click “Next” to continue.

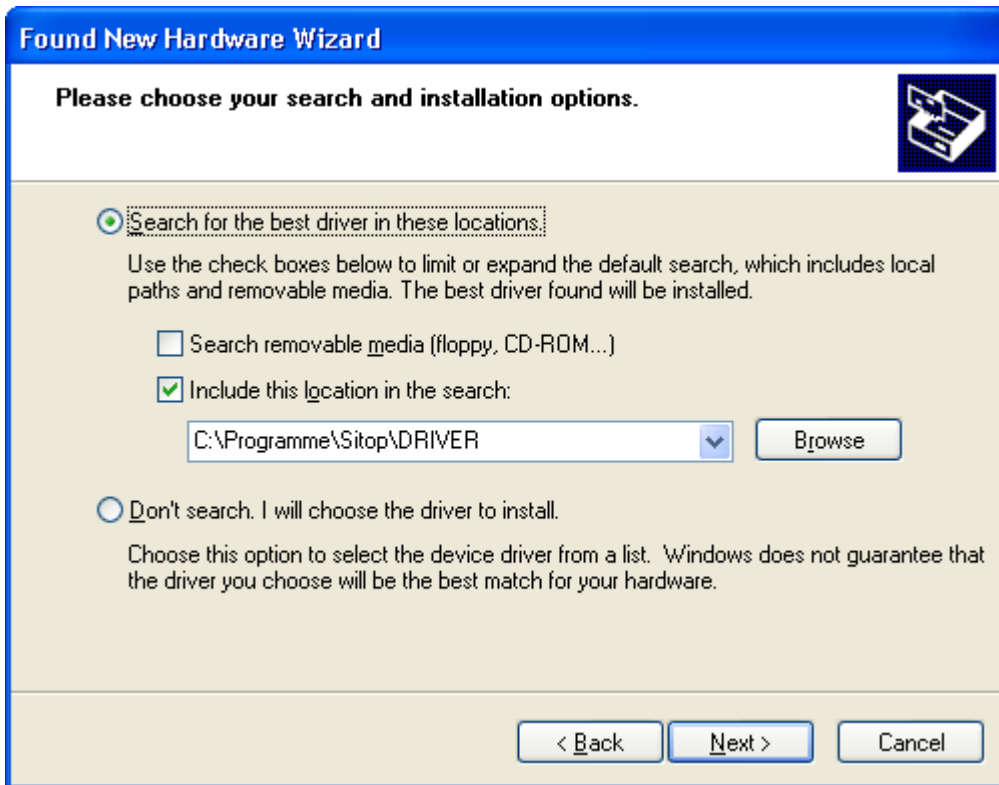


Choose „SITOP DC-UPS“ in the window now following and click „Next“.

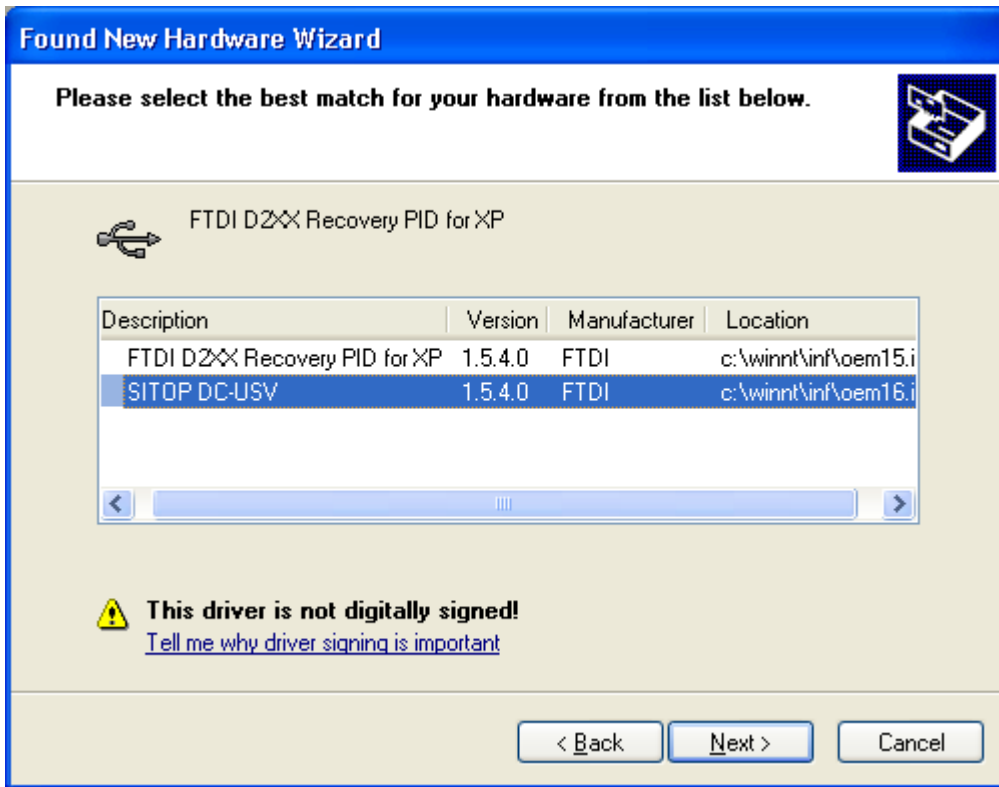


Please acknowledge the following warning with a click on „Continue Anyway“.



In the next window you finish the driver installation with a click on „Finish“. The driver for the SITOP DC-UPS Module with USB interface is now successfully installed.

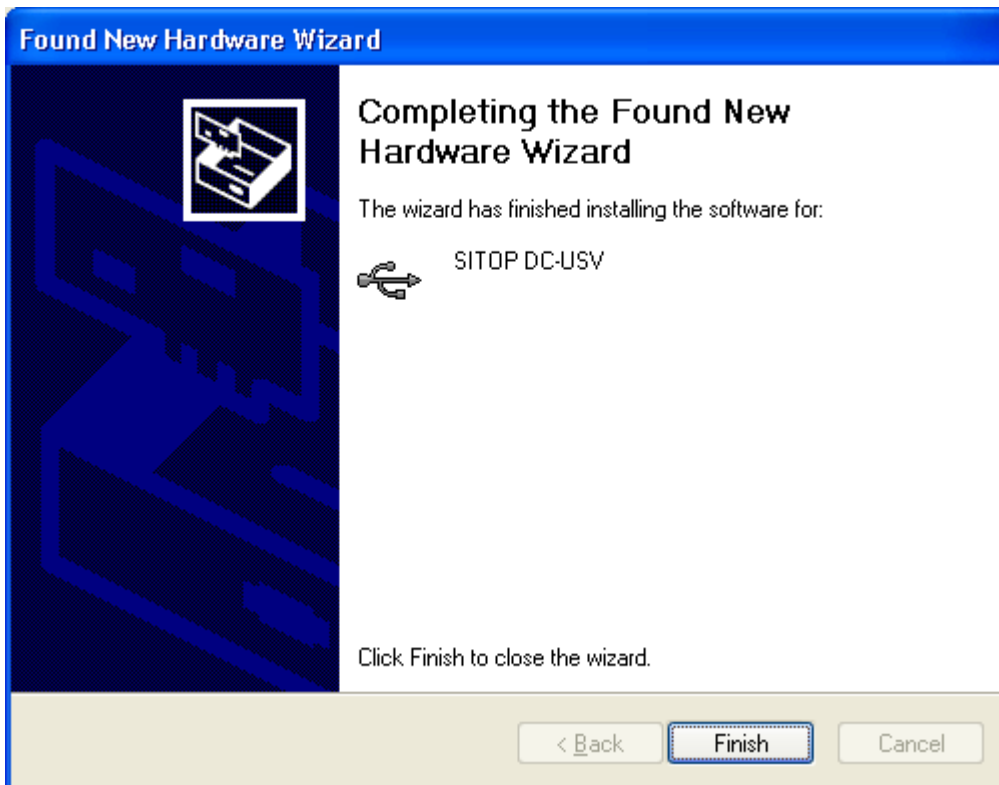

You can control in the Device Manager whether the SITOP DC-UPS Module has been identified correctly:

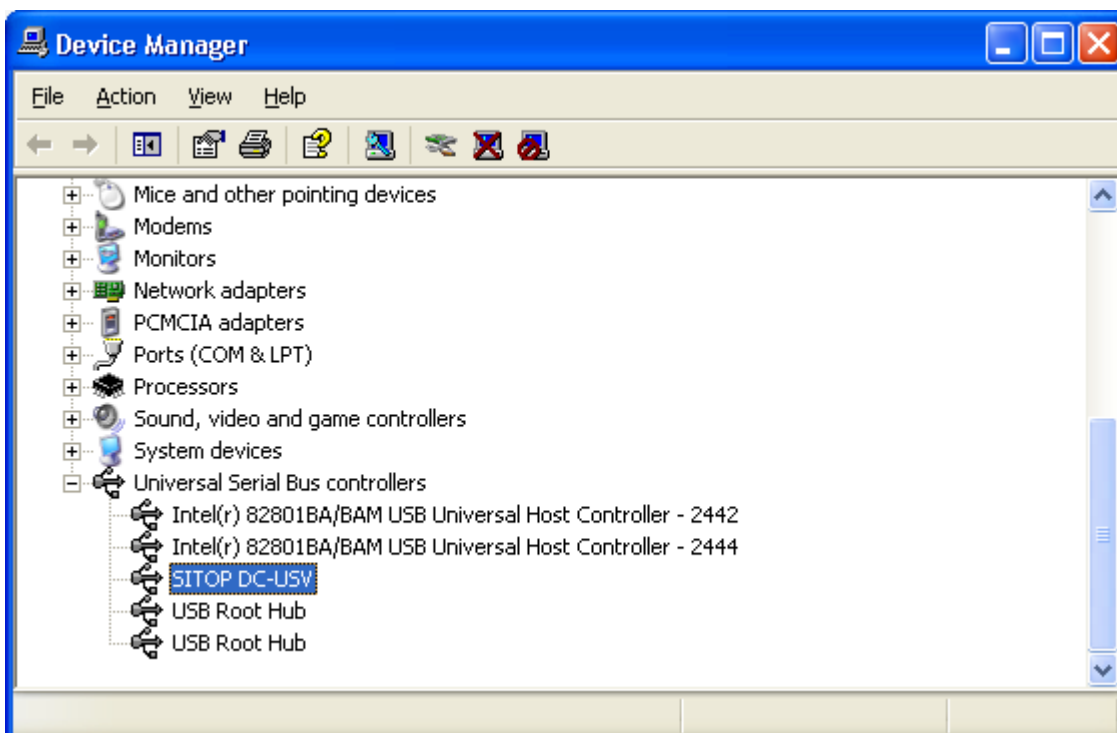

Instructions to uninstall USB drivers for SITOP DC-UPS Module

In order to uninstall the driver, please execute the programme “FTD2XXUN.exe” and follow instructions..

