INDIVIDUAL DRIVE FUNCTION

OBJECTIVE

After working through this instruction module, students will be able to the following:

- Define and classify the term Individual Drive Function within the scope of object-oriented software structuring.

- Understand the concept, the structure as well as the method of functioning of individual drive functions

- Know typical individual drive functions as well as their implementation in **PCS7**.

THEORY IN SHORT

The objective of object-oriented software structuring is this: to emulate as clearly as possible the structure of a real plant through the corresponding modularization of the user software. To this end, at least one function block is provided for each field device type that makes available the following: the entire control logic, necessary protection and monitoring functions, and suitable operating and visualization options. The user program uses this block to implement the desired performance of a machine or a process.

Motors and valves are control engineering devices that -in the sense of object-oriented automation- also are not controlled directly, but are first modeled as function block types. Such function block types are called *Individual Drive Functions (IDF)*. They make controlling, monitoring and the operating the control engineering device possible by providing corresponding connections for actuating and control signals as well as for parameter assignment and monitoring functions. The technical implementation of the controller is realized by an instance of the function block type and remains hidden from the user. Figure 1 shows the transition from the real motor -in this case a pump- to a block of the corresponding individual drive function.

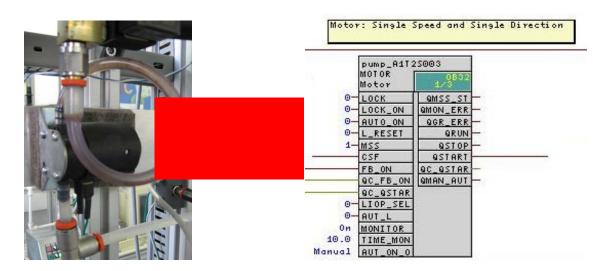


Figure 1: From real motor to individual drive function

Control engineering devices can basically be operated in four different modes. The device may be in the following state:

- Out of service
- Manual mode
- Automatic mode
- Field mode

Individual drive functions must always be in exactly one operating mode. The operating modes listed may be of equal value, or arranged hierarchically by means of priorities. In addition, individual drive functions provide functions that protect against device and process errors. To this end, different locks as well as execution time monitoring for the device and the controlled process are implemented.

Function block types -called block types in *PCS*- represent preassembled program parts for processing repetitive functions. They can be inserted in CF charts and there, as instances, they can be parameterized, wired, and adapted to the project requirements. In this case, the block type specifies the characteristic for all instances of this type. The *PCS7* already provides a large number of efficient and tested individual drive functions as block types in the control engineering libraries. They respectively model a control engineering device and make the entire control logic available. In addition, functions are offered for:

- **Operating** and **monitoring** the individual drive function
- Controlling signals
- Monitoring and alarming
- Operating mode selection
- Locks

Picture blocks with different *views* allow for seamless integration into a corresponding process control system.

Individual drive functions make the efficient development of high performance, qualitatively high-grade solutions possible. They model and typify repetitive functionalities. Thus, they can be reused and centrally modified, and therefore accelerate the development process considerably.

THEORY

OBJECT ORIENTED SOFTWARE STRUCTURING

The objective of object-oriented software structuring consists of this: to emulate as clearly as possible the structure of the real plant through corresponding modularization of the user software. To this end, a separate program is created for each field device in the plant. At least one function block is provided for each field device.

This block implements the entire control logic for this field device type. In addition, it provides for the necessary protection and monitoring functions as well as suitable operating and visualization options. It thus encapsulates the entire functionality that is needed in connection with the corresponding field device type. The user program utilizes this block to implement a desired control system for a machine or a process, without having to resort to knowledge of the internal data and the operations of the function block.

CHANNEL FUNCTIONS (DRIVERS)

As a supplement to handling the field devices through re-useable blocks, it is often advisable the abstract IO interfacing also by means of *channel blocks* (drivers). Although it is always possible to access the process image directly by means of a symbol name or address, the possibly multiple parameters for configuring the channel have to be set at another location. This quickly leads to programs that are not easy to follow. *PCS7* offers a number of channel blocks that not only evaluate the status signals of the modules, but also support testing and commissioning automation programs by means of simulation modes. In the analog channel blocks corresponding to Table 1, the internal digital variables are mapped to the physical operands and display variables by means of the parameters VLRANGE and VHRANGE. If channel blocks are used, *PCS7* is able to generate the needed drivers automatically. For that reason, the channel blocks are used frequently in the templates of the *PCS7* libraries.

Channel block	Block	Connector, Parameter	Quality of Signal
Digital output	CH_DO	VALUE	QBAD, QUALITY
Digital input	CH_DI	VALUE	QBAD, QUALITY
Analog output	CH_AO	VALUE, VLRANGE, VHRANGE	QBAD, QUALITY
Analog input	CH_AI	VALUE, VLRANGE, VHRANGE	QBAD, QUALITY

Table 1: Various channel blocks to encapsulate processing I/O signals

INDIVIDUAL DRIVE FUNCTIONS

As control engineering devices, motors and valves are of central importance in factory and process automation. There is a considerable variety of types with specific operator and signaling characteristics on the market. In the sense of object-oriented automation, such devices are not controlled directly, but first modeled as function block types. The device is then always controlled indirectly, by means of an instance of the corresponding function block type. Function blocks for motors and valves are referred to as *Individual Drive Functions (IDF)*. They make controlling, monitoring and operating control engineering devices possible by providing corresponding connections for actuating and control signals as well as for parameter assignment and monitoring functions. The technical implementation of the controller -such as startup performance, controlling the drive, or device monitoring- is realized by the function block instance and remains hidden from the user. *PCS7* already offers a large number of efficient and tested individual drive functions as block types in the control engineering libraries. Table 2 summarizes the individual drive functions functions of the *PCS7 Standard Library* [2].

More complex individual drive functions are provided in the **PCS7** Advanced Process Library [3].

Individual Drive Function	Usage	Object Name
MOTOR	Control of motors by means of a control signal (on/off) and a feedback signal	FB 66
MOT_REV	Control of reversible motors (clockwise/counterclockwise direction) and up to two feedback signals	FB 67
MOT_SPED	Control of two-speed motors (slow/rapid) and two feedback signals	FB 68
VALVE	Operation of control valves (open/close fittings) by means of one control signal (open/close) and two position feedback signals (open/closed)	FB 73
VAL_MOT	Control of motor-driven valves by means of two control signals and two position feedback signals (open/closed)	FB 74

Table 2: Individual drive functions of the **PCS7Standard Library**

SAFETY PROVISIONS

When controlling control engineering devices, various protective provisions have to be established. Not only do the devices themselves have to be protected from errors, the controlled process has to be taken to a safe state if there is an error, and kept there until the error is eliminated.

It is not always possible to prevent *device errors* (such as cable break, axle break) through control engineering. However, the effects can be minimized using redundancy concepts.

Process errors (such as container overflow, dry running of a pump) should, on the other hand, be prevented directly by the controller. To this end, corresponding **locks** are implemented. If, based on the current input values the individual drive function recognizes a dangerous process state, the controlled device it taken to a safe state (refer to chapter 'Plant Safety'). The device is retained in this mode for the duration of the dangerous state. Usually, locks are specified using a **lock matrix**.

To detect a device error, the individual drive function frequently *monitors* the *execution time*. Using certain encoder information -such as limit encoders in valves- the individual drive function checks whether the control signals that are read out have the required effect. If over a certain time period, the measured values contradict the control signals that are read out, this indicates a fault. If such an execution time error is detected, an alarm is sent to the higher level control system and the controlled device is deactivated. The device remains inactive until the execution time error is eliminated and the alarm is acknowledged. Often, simple binary circuit breakers are used to detect device errors.

OPERATING MODES

In general, control engineering devices are not operated exclusively automatically. From time to time, it is necessary to handle the control manually at the control desk, or to control the device locally; for example, for repairs. For that reason, four basic operating modes are distinguished:

- **Out of service** The device is not active
 - Automatic mode The individual drive function is controlled automatically by a higher level program
- **Manual mode** The individual drive function is controlled directly by the operator by means of an operator graphic of the control system
- Field mode The operator operates the device locally; for example, by means of an operator panel

The individual drive function must always be in exactly one operating mode. There are several concepts as to how the operating mode switch connected with this can be implemented safely and clearly. Basically, these concepts can be differentiated in two ways: equality of the operating modes and an operating mode hierarchy. In the second case, the possible operating modes are clearly prioritized in addition. A selected operating mode is changed exactly when the device is either not active (operating mode **Out of service**) or when the desired new operating mode has a higher priority than the one that is selected.

FUNCTION BLOCK TYPES IN PCS7

In **PCS7**, function block types are designated as block types and represent preassembled program parts for processing repetitive functions. They can be inserted into CF charts and there, as instances, they can be parameterized, wired and adapted to the product requirements.

In this case, the block type specifies the characteristic for all instances of this type. To this end, the block types of a project that are used are stored in a master data library. If the block stored there is changed, the changes are accepted directly by all instances. This concept of type definition supports efficient engineering through reusability and central modifiability of frequently repetitive functions.

The individual drive function in *PCS7* models a control engineering device and makes the entire control logic available. Figure 2 describes the basic structure of the corresponding motor block using the individual drive function *MOTOR* (FB 66) as an example.

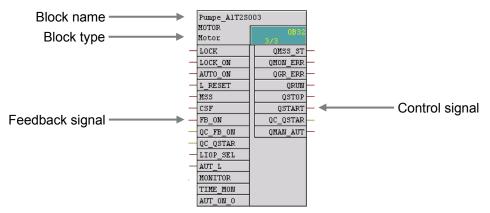


Figure 2: Block of the individual drive function MOTOR (FB 66)

In addition, the block provides the following functions:

Operating, Monitoring, Signaling

By means of a display area and an operating area, it is possible to operate and monitor process values and setpoints. Operator authorization and maintenance releases can be controlled. General and instance-specific indications provide information regarding the device and process status.

Controlling the Signals

Control signals can be read out either statically or pulsed. The signal status -i.e., the quality of the control signals- is monitored. Internal and external setpoints as well as simulated values can be specified. In addition, ramps or dead zones can be set.

Monitoring

The block is able to monitor limits and if the limits are violated, generate corresponding warnings or alarms. In addition, feedback of control signals can be monitored.

Lock Functions

The block allows for the following: simple start enable, lock without reset as well as lock with reset. It implements a motor protection function that can switch the motor off if there is a thermal overload. In addition, a fast stop is provided for motors that have the highest priority in all operating modes and operating states. If there is an lock, the device is automatically taken to a de-energized state, and thus taken to a defined safe state.

Operating Mode Selection

The operating modes introduced above: Local mode, automatic mode, manual mode and out of service mode are available to the **PCS7** for all individual drive functions. They are prioritized descending, in the sequence listed; automatic and manual mode have the same priority. In addition, it is possible to take the block into another operating mode by means of configurable input parameters, regardless of the currently available control (*forcing* operating modes).

Picture Blocks with Different Views

For each block type, picture blocks provide the corresponding block symbol, and depending on the application case, corresponding views. Typical picture blocks are, for example, the block symbol itself, the parameter view of motors and valves, or the limit view of motors.

This listing clearly indicates the complexity and the functional scope of a customary individual drive function. The number of available input and outputs for these block types is correspondingly large. For example, the individual drive function *MOTOR* (FB 66) has a total of 53 connections. To keep the complexity of the program draft low nevertheless, we can hide inputs or outputs that are not needed. In addition, the individual drive functions in *PCS7* use a uniform and system-wide scheme to designate the inputs and outputs.

The individual drive functions in **PCS7** offer a large functional scope and guarantee constant high quality and reliability of the algorithms used. All block types have been tested extensively and have proven themselves industrially. This considerably shortens the effort for developing high performance, qualitatively high grade solutions.

LITERATURE

- [1] Seitz, M. (2008): PLCs. Hanser Fachbuchverlag (Publisher of Technical Literature)
- [2] SIEMENS (2009): Process Control System PCS 7: PCS 7 Standard Library V71.

[3] SIEMENS (2009): Process Control System PCS 7: PCS 7 Advanced Process Library V71.


STEP BY STEP INSTRUCTIONS

TASK

As the first program in the **Continuous Function Chart (CFC)**, we are creating a pump motor for discharging the liquid from reactor R001. The pump motor has an output to control the pump, and a feedback to check whether the pump is actually running.

Symbol	Address	Data Type	Symbol Comment
A1.T2.A1T2S003.SO+.O+	I 6.1	BOOL	Pump outlet reactor R001 feedback running
A1.T2.A1T2S003.SV.C	Q 6.3	BOOL	Pump outlet reactor R001 control signal

Table 3: Assignment List

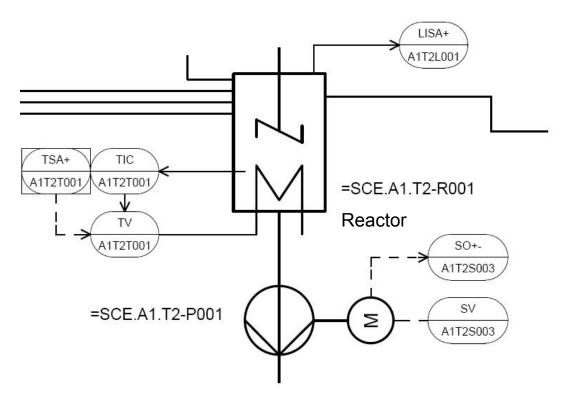



When the program is created, a preassembled chart 'MOTOR' from a **PCS7** library is used. This chart is copied to the project's own master data library and adapted there. Then, the program is loaded into the PLC simulation, and tested.

OBJECTIVE


In this chapter, the student will learn the following:

- Symbol table; setting up and importing symbols
- Using master data libraries and process tag types
- Setting up and editing CFCs
- Compiling a project centrally and downloading it
- Testing the program using the control functions in the CFC

PROGRAMMING

1. Before we start programming the individual drive functions for the pump motor, the symbols for the global variables are set up. To do this, we select the component view in the SIMATIC Manager, highlight the folder 'S7 Program(1)' and open the symbol table by double clicking on Symbol.

 $(\rightarrow$ SIMATIC Manager \rightarrow View \rightarrow Component view \rightarrow S7 Program(1) \rightarrow Symbols)

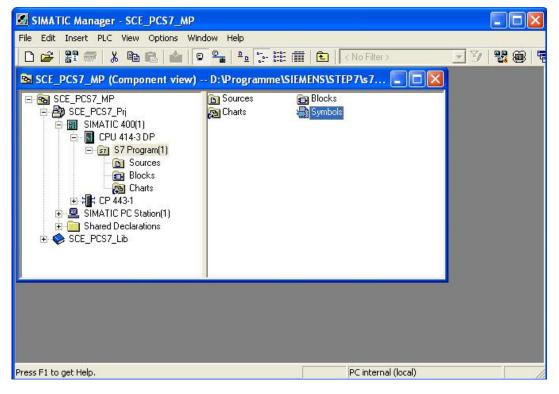

2. In the symbol table, we now specify the symbol and symbol comment for each operand.

6		All Symbol	ls	Y №
Status	Symbol /	Address	Data type	Comment
	A1T2.A1T2S003.SO+O+	I 6.1	BOOL	pump outlet reactor R001 feedback running
	A1T2.A1T2S003.SV.C	Q 6.3	BOOL	pump outlet reactor R001 control signal

 If available, we can also import the content for the complete symbol table in the *.dif format. (→ Symbol Table → Import). In this case, the imported table is integrated in the existing table.

Open	Ctrl+O	· ∑/ k ?	
Close	Ctrl+F4	ment	
Save	Ctrl+S	o outlet reactor R001 feedback running	
Properties		-) outlet reactor R001 control signal	
Import			
Export			
Print	Ctrl+P	-	
Print Preview			
Page Setup		_	
1 SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\\Symb	ole		
2 SCE_PC57_Prj\SIMATIC 400(1)\CPU 414-3 DP\\Symb	ole		
3 SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\\Symb			
4 SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\\Symb	ole		
Exit	Alt+F4		

4. Now we select the source file in the 'Data Interchange Format(*.DIF)'

 $(\rightarrow \text{Symbols#03.dif} \rightarrow \text{Open})$

Import	
Suchen in:	🔁 P01_04_PCS7_Individual drive fur 💌 🖨 👚 📰 🕶
symbols_(07_e.dif
Dateiname:	symbols_07_e.dif Ülfnen
Dateityp:	Data Interchange Format (*.DIF)
Dateityp.	

5. Prior to closing, we save the completed symbol table.

		<mark>or - [S7 Program(1)</mark> Edit Insert View Opl			7_Prj\SIMATIC 400(1)\CPU 414-3 DP]	
				2010 - 2010 8 9	 	1923
-	≏tatus	Symbol /	Address	Data type	Comment	1
1 Save		41.A1H001.HS+STAR	1 0.0	BOOL	Main power switch multipurpose plant	
2		A1.A1H002.HS+OFF	I 0.1	BOOL	emergency switch OFF	
3		A1.A1H003.HS+LOC	1 0.2	BOOL	local operation mode switch	
4		A1.T1.A1T1L001.LS	1 1.0	BOOL	level monitoring educt tank B001 switchpoint high	
5		A1.T1.A1T1L001.LS	1 1.1	BOOL	level monitoring educt tank B001 switchpoint low	
6		A1.T1.A1T1S001.SO	1 1.2	BOOL	pump outlet educt tank B001 feedback running	
7		A1.T1.A1T1X001.GO	1 1.3	BOOL	valve inlet educt tank B001 feedback signal opened	
8		A1.T1.A1T1X004.GO	1 1.4	BOOL	valve outlet educt tank B001 feedback signal opened	
9		A1.T1.A1T1X001.GO	1 1.5	BOOL	valve inlet educt tank B001 feedback signal closed	
10		A1.T1.A1T1X004.GO	I 1.6	BOOL	valve outlet educt tank B001 feedback signal closed	
11		A1.T1.A1T1L002.LS	1 2.0	BOOL	level monitoring educt tank B002 switchpoint high	
12		A1.T1.A1T1L002.LS	1 2.1	BOOL	level monitoring educt tank B002 switchpoint low	
13		A1.T1.A1T1S002.SO	1 2.2	BOOL	pump outlet educt tank B002 feedback running	
14		A1.T1.A1T1X002.GO	1 2.3	BOOL	valve inlet educt tank B002 feedback signal opened	
15		A1.T1.A1T1X005.GO	1 2.4	BOOL	valve outlet educt tank B002 feedback signal opened	
16		A1.T1.A1T1X002.GO	1 2.5	BOOL	valve inlet educt tank B002 feedback signal closed	
17		A1.T1.A1T1X005.GO	1 2.6	BOOL	valve outlet educt tank B002 feedback signal closed	
18		A1.T1.A1T1L003.LS	1 3.0	BOOL	level monitoring educt tank B003 switchpoint high	

 In extensive libraries, *PCS7* makes a large number of completed blocks and also preassembled charts -socalled templates- available. We want to use just such a template. To this end, we open the *PCS7 Library V71*.


 $(\rightarrow$ File \rightarrow Open \rightarrow Libraries \rightarrow PCS7 Library V71 \rightarrow OK)

SIMATIC Manager - SCE_PCS7_MP				
File Edit Insert PLC View Options Window Help				
New 'New Project' Wizard	Ctrl+N	< No Filter >	<u>-</u> 7/ 2	<mark>:</mark> @ 4
Open	Ctrl+O	EP 7 \s 7 💶 🗖 🔀		
Close				
Multiproject		•		
S7 Memory Card		•		
Memory Card File		•		
Save As	Ctrl+S	_		
Delete				
Reorganize				
Manage				
Archive				
Retrieve				
Print		F		
Page Setup				
1 SCE_PCS7_MP (Multiproject) D:\\s7proj\SCE_PCS7\SCEMP				
2 SCE_PCS7_MP (Multiprojekt) D:\\SCE_PCS7\SCEMP				
3 SCE_PCS7_MP (Multiprojekt) D:\\SCE_PC_2\SCEMP				
4 SCE_PCS7_MP (Multiprojekt) D:\\Done\SCE_PCS7\SCEMP				
Exit	Alt+F4			


Storage path	^
D:\Programme\SIEMENS\STEP7\S7lil	
D:\Programme\SIEMENS\STEP7\S7lil	
D:\Programme\SIEMENS\STEP7\S7lil	-
D:\Programme\SIEMENS\STEP7\S7lil	
D:\Programme\SIEMENS\STEP7\S7lil	1
D:\Programme\SIEMENS\STEP7\S7lil	
D:\Programme\SIEMENS\STEP7\S7lil	~
	D:\Programme\SIEMENS\STEP7\S7lib D:\Programme\SIEMENS\STEP7\S7lib D:\Programme\SIEMENS\STEP7\S7lib D:\Programme\SIEMENS\STEP7\S7lib D:\Programme\SIEMENS\STEP7\S7lib D:\Programme\SIEMENS\STEP7\S7lib

7. To drag this template from the library into our project, we place the project next to the library window.

 $(\rightarrow Window \rightarrow Arrange \rightarrow Vertically)$

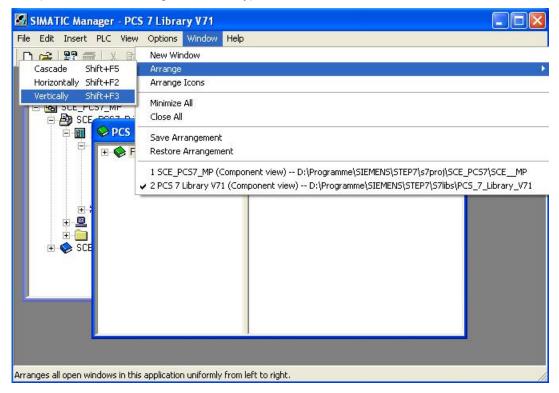

 In the component view of our multi-project, we highlight -in the master data library 'SCE_PCS7_Lib'- the folder 'Charts'. With the mouse, we drag the template 'MOTOR' from the folder 'Templates' of the *PCS7 Library V71* to the folder 'Charts'. Then we close the *PCS7 Library V71*.

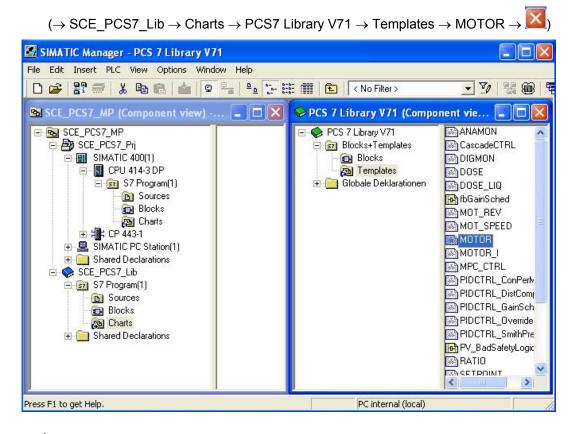



Note: Since we are using this template several times for controlling the motor, it is first copied to the master data library 'SCE_PCS7_Lib' in our multi-project.

This master data library ensures that within a project, always the same version of blocks and chart templates (process tag types) is used.

9. For the next steps, we return to the plant view.

 $(\rightarrow \text{View} \rightarrow \text{Plant View})$

SIMATIC Manager	- SCE_PCS7_MP								
File Edit Insert PLC	View Options Window Hel	P	- 22					*****	
🗋 🗁 🚼 🛲 X				€ < N	o Filter >		- 70	8	0 4
C	Plant View					1		1	
SCE_PCS7_MP (C	Process Object View		IEME	NS 😑					
E SCE_PCS7_MP E B SCE_PCS7_ E B SIMATIC	Process Device Network Vie	N							
	✓ Offline Online								
⊡ 📄 Shared [⊡ 😪 SCE_PCS7_ ⊡ 🛐 S7 Progr	Define Columns								
B Sour		Num*							
Bloc	Hide All Levels	Num-							
	Update	F5							
	2								
Changes to the Plant View	e								1.

- 10. In the master data library, we now cut the entire folder 'MOTORS' from the templates.
 - $(\rightarrow \mathsf{SCE_PCS7_Lib} \rightarrow \mathsf{Templates} \rightarrow \mathsf{MOTORS} \rightarrow \mathsf{Cut})$

	Manager - SCE_PCS7_MP					
File Edit I	nsert PLC View Options Window	v Help				
🗋 🗅 🚅 🖁	17 🛲 X 🖻 🖻 🏄 🔍		1 E < No	o Filter >	- V	
SCE_P	CS7_MP (Component view) D):\Programme\SIEM	ENS			
🖃 😼 SCE	E_PCS7_MP 🛛 🔼 🗵	MOTOR				
	SCE_PCS7_MP (Plant View) -	- D:\Programme\SI	EMENS\STEP	P7\s7proj\	SCE_P	
		MOTORS				
	🗄 🎒 SCE_PCS7_Pri	Cut	Ctrl+X			
	🖻 💊 SCE_PCS7_Lib	Сору	Ctrl+C			
	🗄 🦲 Shared Declarations	Paste	Ctrl+V			
		Delete	Del			
	E MOTORS	Insert New Object		•		
÷-•		Print		•		
		Plant Hierarchy		•		
		Process Tags		•		
		Models		•		
P		SIMATIC BATCH				
		Rename	F2			
		Object Properties.	Alt+Return	1		
C de lles a l						
Cuts the selec	ted objects and puts them in the clipbo	bard,				11

11. The folder we copied is pasted again under Process tag types.


 $(\rightarrow$ Process tag types \rightarrow Paste)

SIMATIC Manager - SCE_PCS7_M	٨P			
File Edit Insert PLC View Options	Window Help			
🗋 D 🥔 🎛 🐖 👗 🖻 🛍 🧰		a 8-8- Ⅲ	🔁 🛛 < No Filter >	🗾 🏹 🔣 🎯 🖣
SCE_PCS7_MP (Component vie	w) D:\Progra	amme\SIEMEt	vs 🔳 🗖 🗙	
	E NUOTOD			
SCE_PCS7_MP (Plant Vi	ew) D: \Progr	amme\SIEME	NS\STEP7\s7proj\SC	E_P 🗖 🗖 🔀
 □ SCE_PCS7_MP □ Description □ SCE_PCS7_Pri □ SCE_PCS7_Lib □ Shared Declaratio □ Models □ Process tag types □ Implates □ Implates □ Implates 		Ctrl+X Ctrl+C		
	Paste	Ctrl+V		
	Delete	Del		
	Insert New Obj	ject)	
	Print		×	
	Plant Hierarchy	8	•	
	Process Tags Models			
Pastes the contents of the clipboard at the	SIMATIC BATC	н		



Note: Using process tags types as templates for measuring points allows us to later make changes centrally. When the process tag types are changed, the measuring points in the project are adjusted automatically.

 If a change is to be made centrally for all process tags of the type 'MOTOR', this is done by opening the CFC 'MOTOR' in the master data library with a double click. (→ MOTOR)

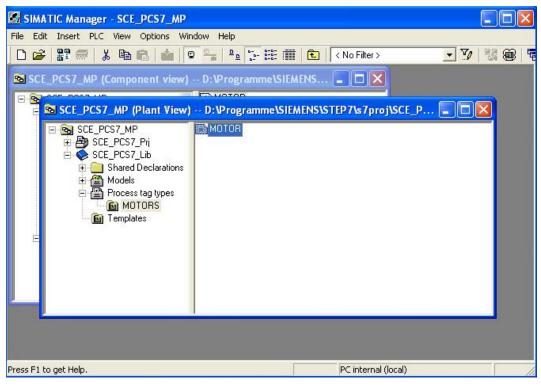




Note: CFC means Continuous Function Chart and is a graphic programming language for describing continuous processes. In the CFC, preassembled blocks are placed, parameterized, and wired. Thus, the programmer creates an overall software structure for controlling and regulating a machine.


13. A CFC consists of sub-charts with six partitions respectively. In the overview, all 6 partitions with their gray margin bars are displayed. On the margin bars, to the left the coming signals are shown, and to the right the going signals of a partition. Double clicking on a partition takes us to the partition view.

 $(\rightarrow \text{Overview} \rightarrow \text{Double click on the first partition})$

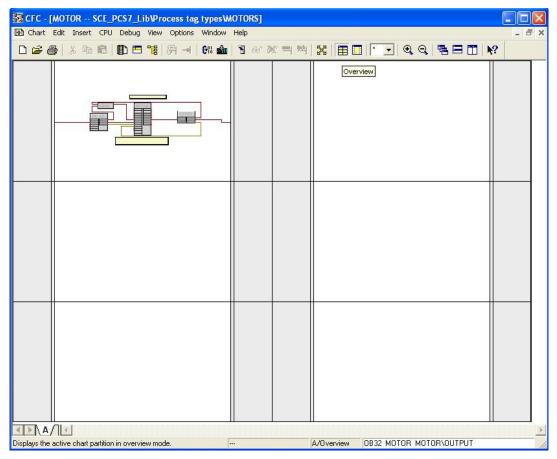

Note: Using the registers on the lower bar you can switch between sub-charts (maximum A to Z). Here, however, initially only sub-chart A exists.

14. In our process tag type 'MOTOR' we want to make a change at the block 'MOTOR'. To this end, we open its properties with a double click.(\rightarrow MOTOR)

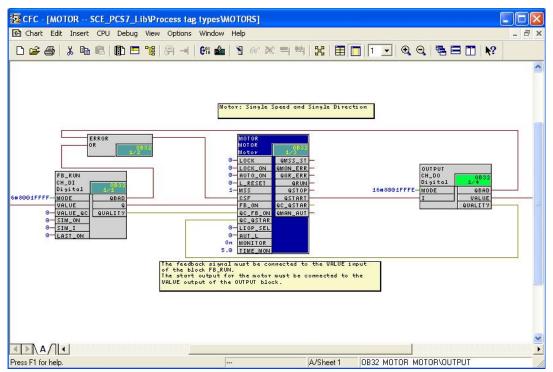

15. Since we don't want to change the general properties such as controlling and monitoring capability, we switch to the connections. (\rightarrow Connections)

Properties - Block -	- MOTOR MOTOR		×
General 1/0s			
Type: Name: Comment:	MOTOR	Block group:	
Inputs: Internal identifier: Instance DB: Name (header): Family:	41 FB66 DB65 MOTOR CONTROL	C OCM possible Operator C and M C Create block icon: MES-relevant	
Author: To be inserted in OB OB100 [Warm reference] OK		Special properties	


16. The connections are shown in a table, together with numerous settable properties. The most important properties will be presented below. In our process tag type 'MOTOR' we only want to delete the invisibility for 'AUT_ON_OP'. Thus, this connection is shown in the partition. (→ AUT_ON_OP → □ → OK)

Image: Figure 3 Comment Image: Imag	ode 1=AUTO, 0	✓ No č ✓ ✓
AUTO Mode:1=0 Enable: 1=Opera Auxiliary Value 4 Auxiliary Value 5 Auxiliary Value 6	N, 0=Off tor may input A	No a
Enable: 1=Operal Auxiliary Value 4 Auxiliary Value 5 Auxiliary Value 6	tor may input A V	
Auxiliary Value 4 Auxiliary Value 5 Auxiliary Value 6		
Auxiliary Value 5 Auxiliary Value 6		
Auxiliary Value 6		
Auguitary Value 7	· · · · · · · · · · · · · · · · · · ·	
Auxiliary value /		
Auxiliary Value 8		
Auxiliary Value 9		
Auxiliary Value 10		
Batch Enable		No a
Batch ID		No a
Batch Name		
Control System Fa	ault 1=External	
1=In case of Fau		
Feedback: 1=ON		V No a
Linkable Input RE	SET 📃	
Select: 1=Linking,	, 0=Operator Ac	
1=Lock to OFF		V Noa
1 1=Lock to ON		
I=LOCK to UN		V Noa
		Auxiliary Value 10 ✓ Batch Enable ✓ Batch ID ✓ Batch Name ✓ Control System Fault 1=External ✓ Image: Image of Fault: Motor OFF ✓ Image of Fault: Motor OFF ✓




Note: With a mouse click on the heading of a property, the items in this column are sorted alphabetically <<?>>.


17. The block 'MOTOR' has become larger in the partition, of course, and overlaps with the comment field. We are solving this problem by moving either the block or the comment field, and the block is shown again completely. (→ MOTOR)

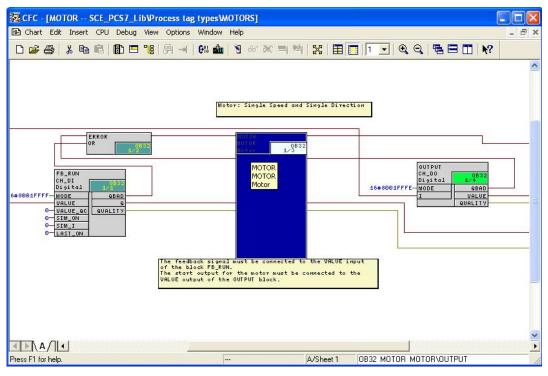


18. We now simply close the process tag type. Changes are saved automatically. (\rightarrow

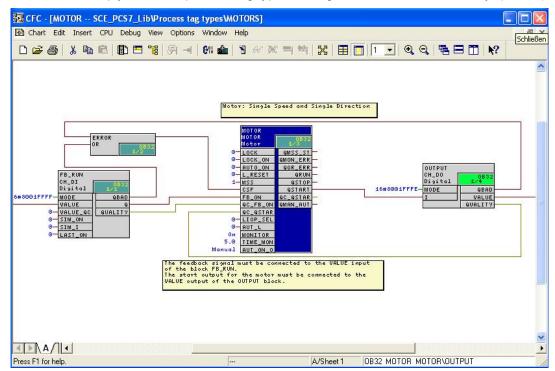

19. To use the process tag type 'MOTOR', we move it directly to the chart folder 'A1T2S003'. (\rightarrow MOTOR \rightarrow A1T2S003)

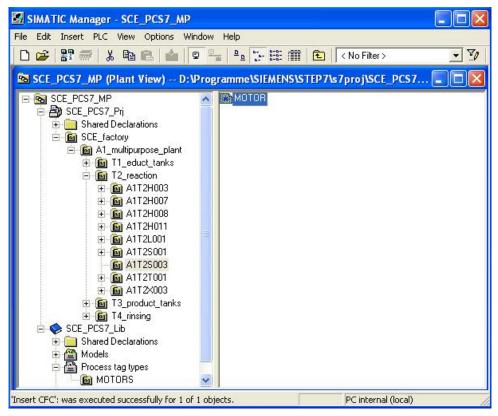


- 20. The chart is now named like the chart folder and opened with a double click.
 - $(\rightarrow A1T2S003 \rightarrow A1T2S003)$

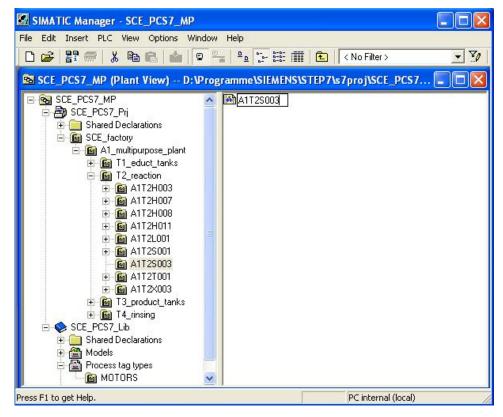

21. A double click opens the properties of the block 'MOTOR'.

 $(\rightarrow MOTOR)$

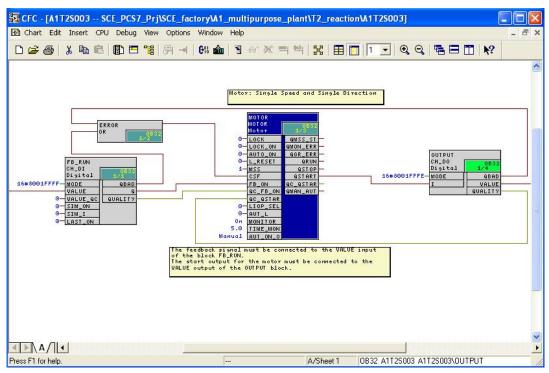

- 22. Under Properties/General, we change the name of the block.
 - $(\rightarrow pump_A1T2S003 \rightarrow OK)$


Properties - Block -	- A1T2S003W0TOR	
General 1/0s		
Type: Name: Comment:	MOTOR pump_A1T2S003 Motor	Block group:
Inputs: Internal identifier: Instance DB: Name (header): Family: Author: To be inserted in OB	41 FB66 DB65 MOTOR CONTROL TECHN71	OCM possible Operator C and M Create block icon: MES-relevant Special properties
OB100 [Warm r	estart]	Messages

23. Now, we change the time for feedback monitoring of the motor block to 10.0 seconds. To this end, we open the property dialog for the input 'TIME_MON' with a double click. (\rightarrow TIME_MON \rightarrow 10.0 \rightarrow OK)

🔂 CFC - [A1T2S003	SCE_PCS7_Prj\SCE	E_factoryW1_multipurpose_plant\T2_reactionW1T2S003]	
🔂 Chart Edit Insert C	PU Debug View Opl	otions Window Help	- 8 ×
D 🗲 🎒 🕺 🖻 🖥	Properties - Input	t/Output 🛛 🔀 🔍 🗟 🖽 🕅 📢	
New Chart New Text New Text New Text New Text Control COMPARE COMPARE CONTROL CONVERT CONVERT CONVERT CONVERT CONVERT NOTIFIC CONVERT NOTIFIC CONVERT NOTIFIC CONVERT	Block:: I/D: Value Comment: Identifier: Force Add forcing Forcing active Force value:	M0TOR.pump_A1T2S003 TIME_MON - IN(REAL) Monitoring Time for ON [s] Mon. Time Unit: s Archive: No archiving Process Object View Process Object View Process Object View Process Object View Process Object View Process Object View	
Find initial letter	ОК	Cancel Help Back sismal must be connect	ed to the 🗸
Press F1 for help.		A/Sheet 1 0B32 A1T2S003 A1T2S003\0UTPUT	

24. Next, we wire the feedback to the input operand. This is done by right clicking on the input 'VALUE' at the CH_DI block. Then, we select the wiring to the operand.

 $(\rightarrow VALUE \rightarrow Interconnection to Address)$

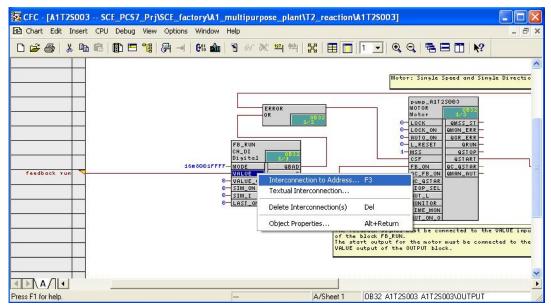




 \triangle

Note: Like the CH-DO, the CH-DI block is a driver block for interfacing the PLC's IO. If at one of these blocks the VALUE is wired to an operand that is also configured in the hardware configuration, the input MODE is later supplied automatically with data during the compilation run.

For this to happen, we have to select 'Generate module driver' during the compilation run.

25. We can then conveniently select the operand directly from the symbol table. (\rightarrow A1.T2.A1T2S003.S0+.0+)

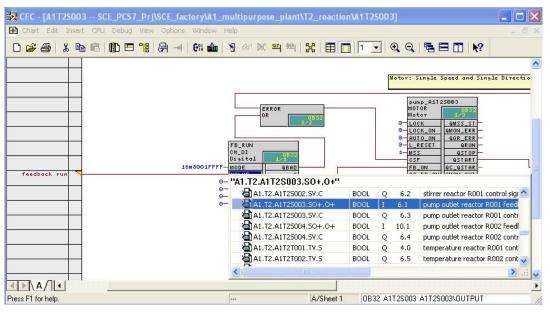

26. We now wire the control of the output operand. This is done by right-clicking on the input 'VALUE' at the CH_DO block. We then select Interconnection to Address.

 $(\rightarrow VALUE \rightarrow Interconnection to Address)$

K CFC - [A1T2S003 SCE_PCS7_Prj\SCE_factory\A1]	_multipurpose_plant\T2_reaction\A1T2S003]	
🗈 Chart Edit Insert CPU Debug View Options Window	Help	- 8 ×
D 😅 🚭 X 🖻 💼 🗗 🖻 🍓 🖂 0% 🎰	I 🖲 @ № 🌉 Щ 🔀 🖽 🔲 I 🔽 🍳 🤤 🖽 🕅 校	
eed and Single Divection 003 003 003 003 003 0052 <td< td=""><td></td><td></td></td<>		
MAN_AUT - QUALITY	Interconnection to Address F3 ital output" Interconnection to Runtime Group	
	Delete Interconnection(s) Del	
	Object Properties Alt+Return	
acted to the VALUE input ust be connected to the -		
		•
Press F1 for help.	A/Sheet 1 0B32 A1T2S003 A1T2S003\0UTPUT	11

27. Again we can conveniently select the operand directly from the symbol table. (\rightarrow A1.T2.A1T2S003.SV.C)

🔀 CFC - [A1T2S003 SCE_PCS7_Prj\SCE_factory\A	1_multipurpose_plant\T2_rea	actionVA	1 T 2 S 0	03]	
配 Chart Edit Insert CPU Debug View Options Windov	v Help				- 8
D 😅 🎒 X 🖻 💼 🗗 🗖 🍓 🖂 CH 🕯	• 9 & x 🛏 🛏 🔀 8		1 💌	Q	9, 50 0 10
ed and Single Direction 03 0553 0553 0555 0555 001PU1 001PU1 04,00 04500 0400000 0400000000					
351ART	"A1.T2.A1T2S003.SV.C"	BOOL	Q	6.2	stirrer reactor R001 control sigr
	a1.T2.A1T25003.SO+.O+	BOOL	I	5.1	pump outlet reactor R001 feed
	A1.T2.A1T25003.SV.C	BOOL	Q	6.3	pump outlet reactor R001 contr
	a1.T2.A1T25004.50+.0+	BOOL	I	0.1	pump outlet reactor R002 feed
ted to the VALUE input	a1.T2.A1T25004.SV.C	BOOL	Q	6.4	pump outlet reactor R002 contr
t be connected to the	a1.T2.A1T2T001.TV.5	BOOL	Q	4.0	temperature reactor R001 cont
	a1.T2.A1T2T002.TV.5	BOOL	Q	6.5	temperature reactor R002 cont 🤜
	< `				
ress F1 for help.	A/Sh	aat 1	0832	11725	003 A1T2S003\OUTPUT

28. But before we compile and download the program for the pump motor, we have to start the PLC simulation **S7** *PLCSIM*. (\rightarrow ^(D))

SIMATIC Manager - SCE_PCS7_MP		
File Edit Insert PLC View Options Windo	w Help	
🗅 😅 🎛 🛲 X 🖻 🛍 🔤	🖳 🖭 🔚 🔁 < No Filter >	<u>.</u> 🗐 🖥
SCE_PCS7_MP (Plant View) D:\Pr	ogramme\SIEMENS\STEP7\s7proj\SCE_PCS7\SC 🔳 🗖 🚮	ulation On/Off
SCE_PCS7_MP SCE_PCS7_Pri Shared Declarations SCE_factory G A1_multipurpose_plant G T1_educt_tanks G T2_reaction G A1T2H003 G A1T2H003 G A1T2H007 G A1T2H008 G A1T2H008 G A1T2H001 G A1T2L001 G A1T2L001 G A1T2L001 G A1T2C001 G A1T2C001 G A1T2C001 G A1T2C003 G A1T2C001 G A1T2C003 G A1T2C003	A1T25003	

29. The PLC simulation behaves like an actual SIMATIC S7 CPU. However, the inputs and outputs have to be inserted first before they can be monitored and operated. (→ Insert → Input Variable → Insert → Output Variable)

S7-PLCSIM1			
File Edit View	Insert PLC Exe	tute Tools	Window Help
0 🚅 🖬 😫	Input Variable	F2	6 in 6 is a 4 k?
र्ग लें से म	Output Variable	F3	
	Bit Memory	F4	
	Timer	F11	
	Counter	F12	
	Generic Vertical Bits	Ctrl+F2	
DP 204			J
STOP STO	MINES		
Shows an Input Vari	able.		Default: MPI=2 DP=2 Local=2 IP=192.168.C 🥢
S7-PLCSIM1			
File Edit View	Insert PLC Exe	cute Tools	Window Help
0 🖻 🖬 😫	Input Variable	F2	6 🖻 🖻 🖷 🗝 📢
라 떠 대 되	Output Variable	F3	
	Bit Memory	F4	
	Timer	F11	
	Counter	F12	
CPU	Generic	Ctrl+F2	
	Vertical Bits		its 🔽
			3 2 1 0
Shows an Output Va	riable.		Default: MPI=2 DP=2 Local=2 IP=192.168.0

30. Now we have to enter the correct byte addresses. \rightarrow EB6 \rightarrow AB6)

💭 S7-PLCSIM1			
File Edit View Insert PLC	Execute Tools Window H	elp	
🗅 🗃 🖬 🖨 🛛 PLCSIM(TO	:P/IP) 💽 🐰 🖻 💼		
e e i i i i i e i			
■] ====================================			
•			
🖪 СРU 📃 🗖 🔀	🖼 IB 6 📃 🗖 🗙	🛯 QB 0 💶 🗖 🔀	
	IB 6 Bits 💌	QB 6 Bits 💌	
	7654 3210	7654 3210	
STOP STOP MRES			
Press F1 to get Help.		Default: MPI=2 DP=2 Local=2 IP=1	92.168.C /

31. To download from the SIMATIC Manager into the **S7** *PLCSIM* via the correct interface, we are correctly setting the PG/PC interface.

 $(\rightarrow SIMATIC Manager \rightarrow Options \rightarrow Set PG/PC Interface)$

	Options Window Help			
🚅 🎛 🐖 👗 🗈 SCE_PCS7_MP (Plant '	Customize Access Protection Change Log	Ctrl+Alt+E	No Filter >	⊻ ½ 🔡 🗑 sc 🗖 🗖 🔀
SCE_PCS7_MP B B SCE_PCS7_Pri C Shared Declara C SCE_factory	Text Libraries Language for Display Devices Manage Multilingual Texts	۰ ۲		
⊡ - 🙆 A1_multipur ⊕ - 📴 T1_edu	Rewire Run-Time Properties			
⊡-@ T2_rea ⊕-@ A11 ⊕-@ A11 ⊕-@ A11 ⊕-@ A11 ⊕-@ A11	Compare Blocks Reference Data Define Global Data Configure Network			
📩 🕞 A11	✔ Simulate Modules			
📴 A11	SIMATIC PDM	۲		
	Configure Process Diagnostics			
	PCS 7 license information			
🖻 📀 SCE_PCS7_Lib	Charts	E		
🗄 🦲 Shared Declara	Shared Declarations	٢		
esses interfaces and paramet	Plant Hierarchy Process Objects Process Objects (Online) Process Tags Models	> > > >	other.	
	SIMATIC BATCH			
-	OS OS Import 'Compile Multiple OSs' Wizard	•		
	CAx Data			

32. As interface, we are setting here PLCSIM(TCP/IP). (\rightarrow PLCSIM(TCP/IP) \rightarrow OK)

et PG/PC Interface	
Access Path LLDP	
Access Point of the Application:	3
S70NLINE (STEP 7)> PLCSIM(TCP/II	P) 💌
(Standard for STEP 7)	
Interface Parameter Assignment Used:	
PLCSIM(TCP/IP)	Properties
PLCSIM(MPI)	Сору
	Delete
(Assigning Parameters for a virtual dummy device which is simulated by PLCSIM for TCP-IP.) Interfaces	
Add/Remove:	Select
ОК	Cancel Help

- 33. In the plant view, we can now highlight the project folder and start compiling and downloading the objects.
 - (\rightarrow Plant View \rightarrow SCE_PCS7_Prj \rightarrow PLC \rightarrow Compile and Download Objects)

🝃 🚼 🛲 % 🏻	a r a é 9 %;		No Filter >	- ⊅	8
CE_PCS7_MP (Plar	nt View) D:\Program				
SCE_PCS7_MP	<u>^</u>	Shared Declarations	Ē.	SCE_factory	
SCE_PCS7_Pri	Open Object	Ctrl+Alt+O			
E B SCE_factor	Cut	Ctrl+X			
E B A1_mul	Сору	Ctrl+C			
🕀 🙆 T1_	Paste	Ctrl+V			
⊡- © T2] ±- ©	Delete	Del			
± 🙆	Insert New Object	•			
÷	Multiproject	•			
÷-64	PLC	×	Compile and Download	Objects	
÷	PCS 7 license informatio	n			
	Shared Declarations	•			
÷ 🙆	Plant Hierarchy	•			
🕀 🛅 T3	Process Tags	•			
. [14] ⊡ ⊡ [16] □ [16]	Models	•			
E Shared Dec	SIMATIC BATCH				
the strait.	Rename	F2			
	Object Properties	Alt+Return			

34. In the following selection, 'Compile and Download' is selected for the hardware and the charts. Then the folder 'Charts' is highlighted and its settings are checked. (→ ♥ → ♥ → ℃ → Charts → Edit)

)bjects	Status	Operating Mode	Compile	Download
By SCE_PCS7_Prj				
E-B SIMATIC 400(1)	1			
🛄 Hardware	undefined			Image: A state of the state
E- CPU 414-3 DP		STOP		
Blocks				
Charts	undefined			
Connections	undefined		2	1
Settings for Compilation/Download — Cupdate —		View Log	Select Objects	
Edit Test State	us Operating Mod		Select Objects	Deselect All

- 35. When compiling the charts, it is important to compile the entire program and have the module drivers generated.
 - $(\rightarrow$ Entire program \rightarrow Generate module drivers \rightarrow S7 Download)

Compile Program / Download t	o Target System	×
Compile Charts as Program S7 Dow	nload	
CPU: CPU 414	3DP	
Program name: SIMATIC	400(1)\CPU 414-3 DP\S7 Program(1)	
Scope		
Entire program		
C Changes only		
Generate module drivers	Block Driver Settings	
ок	Abbrechen Hilfe	

36. Likewise, it is important to have the entire program downloaded when downloading the charts. (\rightarrow Entire program \rightarrow OK \rightarrow OK)

Compile Program / Dov	wnload to Target System 🛛 🛛 🛛
Compile Charts as Program	S7 Download
CPU:	CPU 414-3 DP
Program name:	SIMATIC 400(1)\CPU 414-3 DP\S7 Program(1)
Download mode	
Entire program	
C Changes only	
C To test CPU (entire	program)
]	Show Changes
Include user data blo	cks
	entire program, the CPU is set to STOP and all blocks are download the S7 program?
Read the notes in the on	ine help about possible effects
ОК	Abbrechen Hilfe

Downloa	nd (244:4028)
1	Note that the blocks in the CPU will be deleted if you download later (e.g. in the Simatic Manager with "CPU->Compile and Download Objects").
	Also note that the operator input from the OS or test mode will be lost if the set values values are not read back into the offline program.

37. Now, we can start 'Compile and Download'. The warnings and notes about plant safety should be read carefully. Prior to 'Compile and Download' the CPU has to be switched to the 'STOP' mode. (\rightarrow Start \rightarrow OK \rightarrow Yes)

bjects	Status	Operating Mode	Compile	Download
By SCE_PCS7_Prj				
SIMATIC 400(1)	8			×
U Hardware	undefined		V	
E- CPU 414-3 DP		STOP	V	w.
Blocks				
Charts	undefined			 Image: A start of the start of
Connections	undefined		V	
ettings for Compilation/Download Update Edit Test Status	Operating Mode	View Log Single Object Al	Select Objects Select All	Deselect All

1	Downloading program chang the case of malfunctions or p damage to personnel and eq downloading to the individual simultaneously after compilati Make sure that no dangerou before executing this functior	rogram errors, cause serious uipment! Make sure also that I CPUs is not done on. s situations could occur
01		Cancel

Compile	and Download Objects (3280:822)
<u>.</u>	If you want to download changes online, please make sure that the prerequisites have been met (e.g. correct settings selected, no previous complete compilation from the OS). A complete download is only possible if the PLCs are not in RUN. Do you want to continue?
Ye	s No

38. Finally, errors and warnings are displayed in a view log. We are closing the window. (\rightarrow

📕 Compile and Download Objects - Editor ~ Date: 12/03/2010 time: 04:07:15 PM Compile: SCE_PCS7_Prj\SIMATIC 400(1)\Hardware -> Object was compiled without errors Date: 12/03/2010 time: 04:07:20 PM Compile: SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\Connections -> Object was compiled without errors Date: 12/03/2010 time: 04:07:23 PM Compile: SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\S7 Program(1)\Charts -> Object compilation was executed (with warnings) Refer to the log for the single objects for more information. Date: 12/03/2010 time: 04:10:10 PM Download: SCE_PCS7_Prj\SIMATIC 400(1)\Hardware -> Object was downloaded without errors Date: 12/03/2010 time: 04:10:11 PM Download: SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\Connections -> Object was downloaded without errors Date: 12/03/2010 time: 04:10:11 PM Download: SCE_PCS7_Prj\SIMATIC 400(1)\CPU 414-3 DP\S7 Program(1)\Charts -> Object was downloaded without errors

39. If you want to view details of the view log, click on 'Single Object'. (\rightarrow Single Object \rightarrow Close \rightarrow Close)

2		🗖 Logs 📃 🗖 🔀
Compile and Download Objects		Compile Check consistency Download Block types Module driver
Selection table:		Filter: <no filter=""></no>
Objects	Status	
E B SCE_PCS7_Prj		Responsible user: Heinz Nahlik
		Compiling all charts as program SIMATIC 400(1)\CPU 414-3 DP\S7 Program(1) on 03.12.2010 16:07:37 Generate block drivers: on
🕅 Hardware	downloaded	Generating SCL sources: off
🖃 🛄 CPU 414-3 DP		W: The "Generate Module Driver" function found 1 warnings.
Blocks		Set sampling times from 03.12.2010 16:08:29
Charts	downloaded	Setting sampling times completed: 03.12.2010 16:08:29.
Connections	downloaded	W: The empty OB1 at the beginning was deleted. It will be created again if it is included in automatic block
		W: Invalid interconnection at A1T2S003.0UTPUT.VALUE: Symbol "digital output" does not have an add End of code generator: 03.12.2010 16:09:57
		0 error(s) and 3 warring(s) found
		o enol(s) and 5 warning(s) round
		Go To Print Save
	-	
		Close Help
Settings for Compilation/Download Update		View Log Select Objects
Edit Test Status	Operating Mod	de Single Object All Select All Deselect All
🗌 🗌 Status dur	ring Upen	
Compile only IV Do not load if compilation error is	s detected	
StartClose		Help


\land

Note: Here, only the warning is displayed that the system cleared the empty OB1.


40. To test the program, the CPU in **S7 PLCSIM** is switched to 'RUN-P'. (\rightarrow S7-PLCSIM \rightarrow RUN-P)

🗑 S7-PLCSIM1 SIMATIC 400(1)\CPU 414-3 DP	
File Edit View Insert PLC Execute Tools Window He	lp
🗅 😅 🖬 🖨 (Plcsim(tcp/ip) 💽 👗 🖻 📾	
□ ↓ □ ↓ □ +1 T =0	
•	
	🖭 QB 6 🖃 🗆 🔀
BE BUN-P	QB 6 Bits 💌
BC RUN RUN STOP MRES	7 6 5 4 3 2 1 0
Press F1 to get Help.	CPU/CP: MPI=2 DP=2 IP=192.168.0.1

41. Before we can monitor the individual blocks in the CFC, the chart has to be switched to the test mode first. (\rightarrow CFC \rightarrow)

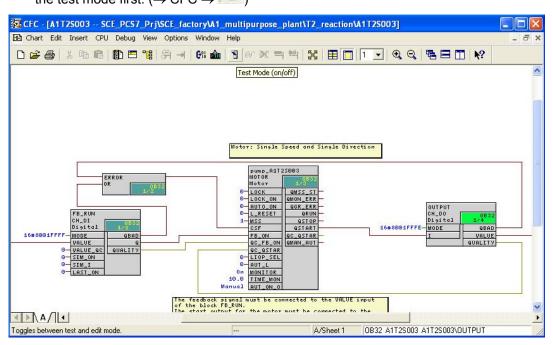

42. We still can't do any monitoring unless the individual blocks are explicitly set for monitoring.

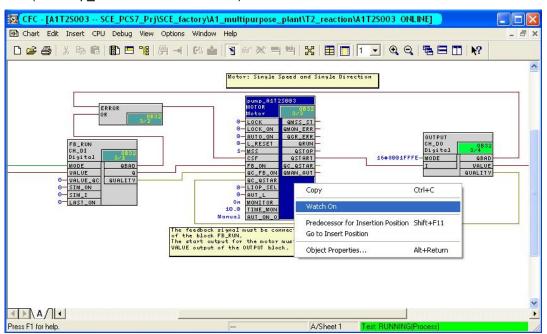

 $(\rightarrow Pump_A1T2S003 \rightarrow Watch On)$


43. To switch on the pump motor from the CFC, we first have to set a few inputs. These are, in the following sequence:

To activate the wiring and passivating the operation in *WinCC* LIOP SEL == 1

Wiring for manual/automatic mode to automatic AUT_L == 1


Switching to automatic mode AUTO_ON == 1

 $(\rightarrow \text{LIOP}_\text{SEL} \rightarrow 1 \rightarrow \text{OK} \rightarrow \text{AUT}_\text{L} \rightarrow 1 \rightarrow \text{OK} \rightarrow \text{AUTO}_\text{ON} \rightarrow 1 \rightarrow \text{OK})$

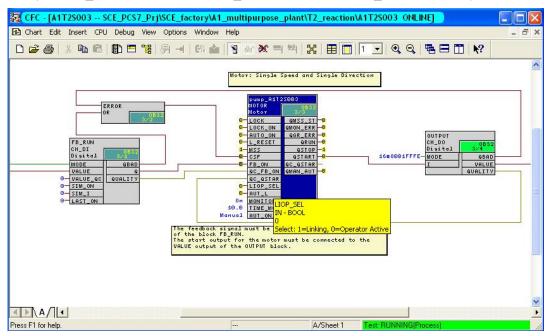

Properties -	nput/Output	K
Block:: 1/0:	MOTOR.pump_A1T2S003 LIOP_SEL - IN(BOOL)	
Value	1 Forcing active	
Comment:	Select: 1=Linking, 0=Operator Active	
ОК	Apply Cancel Help	

44. We can now watch the process as well as the reaction of the plant in the CFC and in the **S7** *PLCSIM*.

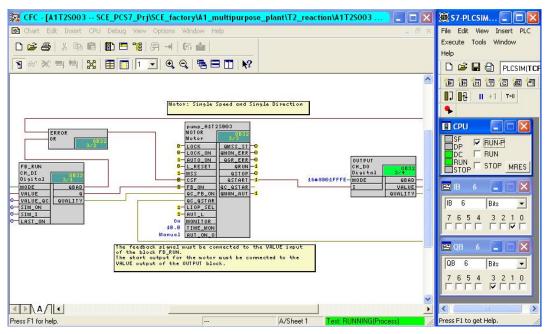

\wedge


Note: For testing, it should not be omitted to set the feedback I 6.1 within 10 seconds after activating the output Q 6.3 in *S7 PLCSIM*. If this is not done, the block switches off Pump A1T2S003 and reads out an error.



Note: If there is no feedback, the pump block not only switches the actuator signal QSTART to 0, but by setting the output QMON_ERR to 1 also indicates that the running indication of the pump did not arrive in time. To prevent damage through repeated attempts to switch it on, the pump block has to be reset first before making another attempt.

To this end, we have to set the input L_RESET briefly to 1 and then to 0 again!

By double clicking on this input parameter of pump block Pump_A1T2S003 the following dialog is displayed. In the field Value, we first enter a 1, then transfer this value to the control system by clicking on 'Apply' and set the error outputs to 0. To return to the normal method of functioning, L_RESET is reset to the original state by entering 0 and once more clicking on 'Apply'.

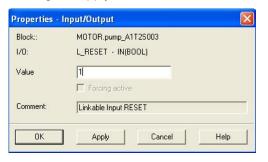

 \triangle

Note: If AUTO_ON is still set to 1 when resetting L_RESET, the block immediately sets the QSTART signal again – and if there is no run feedback, switches it off again!

TESTING THE AUTOMATION LOGIC WITH THE SIMULATION

The manual input of process states to the simulated control system is possible with justifiable effort for testing smaller functions. In the case of more involved sequences with several dynamic process variables, the limits of what is feasible are quickly reached. Here, using a process simulation is advisable.

For that reason, the essential relationships of the process that we are automating here were mapped with the simulation software *SIMIT* for this course. The model maps the following: the dynamic behavior of the pumps, valves, containers, reactors as well as the local operator panel with main switch, emergency off, switchover to local field operation and the corresponding control elements. In comparison to reality, the dynamic processes are accelerated by a factor of 5 to 50 in order to keep waiting time short.

The interface of the simulator is shown in Figure 4. On the left, it shows the process scheme as well as the signal levels of the controller output and the measured quantity. To the right on top, the ochre-colored field operator control panel is shown, below it a number of control elements for the simulation.

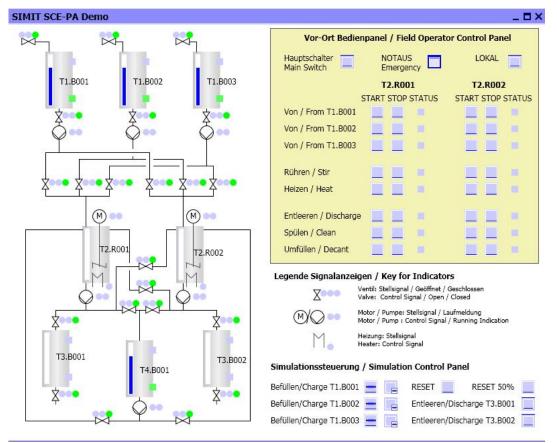


Figure 4: Graphical User Interface of the Process Simulation

Using the simulator is really simple – we only have to make sure that the program is started after **S7** *PLCSIM* and the assignment of the inputs and outputs was not changed.

With the simulator, it is very easy to check the pump control:

- 1. After S7 PLCSIM the simulation program is started.
- 2. Simulation starts with 75% filled educt tanks, all others are empty. With the option 'RESET', this state can be restored any time in the simulation control system. The option 'RESET 50%' fills all tanks -as shown in Figure 4- to 50%.
- 3. For testing, the motor block is set as described in the previous section under Step 43 in the simulation, the control signal of the pump lights up green.
- 4. The simulated motor start takes about 2 seconds. Then, the running indicator for the motor lights up green in the simulation, and the signal level for binary input I 6.1 of the control system is set.
- 5. To open the conveying route, the valve for product tank T3.B001 has to be opened. This valve is operated in the exercise below by means of a suitable individual drive function. In the simulation -with the pump switched on and the valve open- we can watch how the content of reactor T2.R001 is pumped into product tank T3.B001.
- 6. By means of simulation controllers, the product tanks can be discharged and the educt tanks can be charged. When charging by means of the simulation controller, first we have to separate the simulation from the control system. To this end, we click the button with the horizontal line once. Then, we can open the valve with the button next to it on the right. The control signal lights up green and after approximately 1 second, the signal of the limit switch follows for the Open position. After another 5 to 10 seconds, the first changes in the level are visible.
- 7. With 'RESET' and 'RESET 50%', we can take the simulation to a defined state again.

EXERCISES

We are going to apply what we learned in the theory chapters and the step by step instructions to the exercises. We are going to use the existing multi-project in the step by step instructions (PCS7_SCE_0104_R1009.zip) and expand it.

The objective of these exercises is to generate a CFC that controls the valves of the plant. We will build on the knowledge gained from the step by step instructions where a similar CFC for controlling a motor was created.

In addition, we are creating a CFC for standardizing the level; i.e., an analog input value.

TASKS

The following exercises are based on the step by step instructions. For each task, the corresponding steps in the instructions can be used as an aid.

- 1. Based on Table 2, decide which individual drive function is to be used for the present valve, and import the individual drive function into the project library. Also, the template for the valve is to be inserted at the process tag types in the master data library.
- In chart folder A1T3X001, an object instance of the valve control that was just generated in the master data library is to be inserted. If necessary, adapt the names of the blocks in the object instance.
- 3. Use an object instance of your newly generated object type for controlling valve =SCE.A1.T3.V001 with which a connection between reactor =SCE.A1.T2.R001 and product container =SCE.A1.T3.B001 can be opened. The valve is to be controlled with the symbols listed in Table 4.
- 4. Now, test your implementation with the SIMIT model.
- 5. Add FC 275 (CH_AI) from the **PCS7** *Library* **V71** to your project.
- 6. Create a new CFC in chart folder A1T2L001. Drag the block CH_AI (FC 275: Analog Input) that was just added to the first partition of the CFC. Assign a name to the CFC and the block correspondingly. Connect the 'VALUE' input of the block to the symbol for the actual value level of the reactor in Table 4. Set the 'VHRANGE' of the block to -82.945 and the 'VLRANGE' to 2398.945 (these values are used to standardize the measured value).

To ensure that the MODE inputs of the CH-DI and CH-DO blocks are wired correctly, make sure that the option 'Generate module driver' is selected for compilation.

Symbol	Address	Data Type	Symbol Comment
A1.T3.A1T3X001.XV.C	Q 2.0	BOOL	Valve inlet product tank B001 control signal
A1.T3.A1T3X001.GO+O+	I 12.3	BOOL	Valve inlet product tank B001 feedback signal opened
A1.T3.A1T3X001.GO+O-	l 12.5	BOOL	Valve inlet product tank B001 feedback signal closed
A1.T2.A1T2L001.LISA+.M	IW 512	WORD	Current value level reactor R001

Table 4:	Symbols ⁻	for Im	plementing	Valve	Control
	Cymbolo .		pionionang	varvo	001101

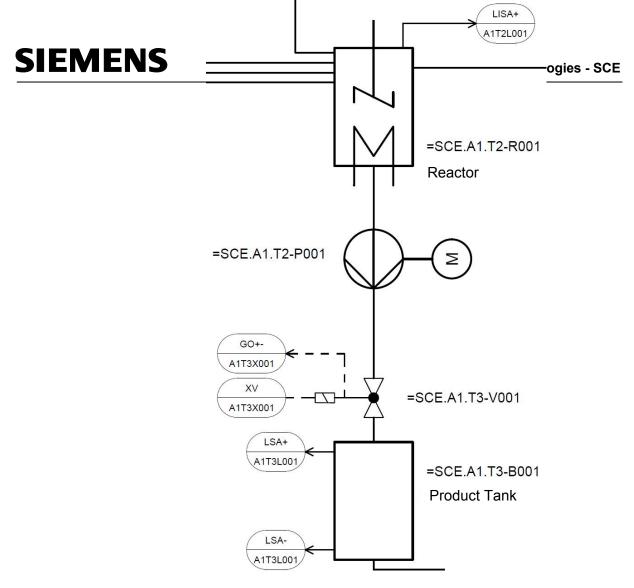


Figure 5: Part of P&ID